

# **OWNERS MANUAL - INSTALLATION INSTRUCTIONS**

## **AIR VOLUME CONTROL KIT**

This accessory kit has been designed for use on Flexcon H2PLU/H2PLS Series tanks only. Please read and understand completely these instructions as well as the instructions included with the tank before attempting installation or service of the product. Retain this manual for future reference. Please pay particular attention to safety warnings on the product and throughout this manual.



# WARNING

THIS IS A SAFETY ALERT SYMBOL. IT IS USED TO ALERT YOU TO POTENTIAL PERSONAL INJURY AND PROP-ERTY DAMAGE. REVIEW ALL GENERAL SAFETY AND PRODUCT INFORMATION PRIOR TO INSTALLATION.

[		1. H2PLS/H2PLU Series tanks are not designed to withstand vacu-	
$\triangle$	WARNING	um. You must install a properly sized vacuum breaker valve if the possibility of vacuum exists in the system.	
		2. Turn off all electrical power to the pump and control system before working on this tank.	
		1. Take proper caution to prevent overheating of plastic fittings and	
CAUTION		parts during assembly. 2. Do not use excessive glue which could cause vent holes and	
		openings to become plugged.	

#### The following materials are required for proper installation;

AVC Kit to include, air volume control, top vent fitting with adapter, coupling. 1/2° pvc pipe cut to proper length (see table)

PVC cleaner and glue

Teflon tape


## Assembly Instructions

Note: When using pvc cleaner and glue, please follow manufacturer's recommendations for use and proper ventilation.

- 1. Cut 1/2" pvc pipe to length ensuring that the cuts are straight and free of burrs.
- 2. Glue the pipe to the top fitting adaptor and the coupling.
- 3. Using teflon tape, thread the air volume control onto the bottom coupling.
- 4. Insert finished assembly into the top fitting of the FLU/FLS tank.



Tank	Pipe
Model	Length
H2PLU30	22.75"
H2PLU 40/H2PLS 40D	31.50"
H2PLU 40 SQ	14.75"
H2PLU 80/H2PLS 80D	42.00"
H2PLU 120/H2PLS 120D	45.00"

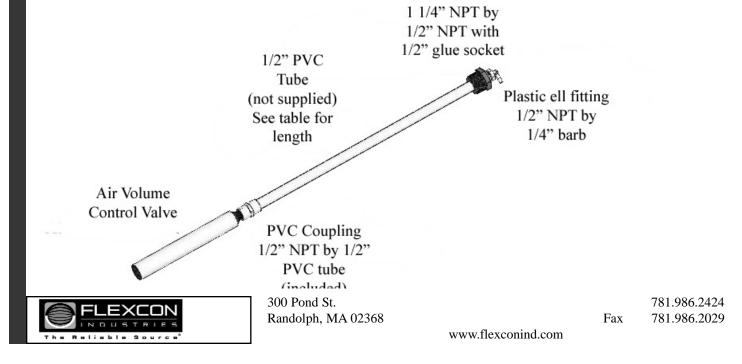



**OWNERS MANUAL - INSTALLATION INSTRUCTIONS** 

## AIR VOLUME CONTROL KIT AVCSP

This accessory kit has been designed for use on Flexcon H2PLU Series tanks only. Please read and understand completely these instructions as well as the instructions included with the tank before attempting installation or service of the product. Retain this manual for future reference. Please pay particular attention to safety warnings on the product and throughout this manual. This can be used in conjunction with a SPA kit, as the bent tube will prevent interference with the stand pipe.



# THIS IS A SAFETY ALERT SYMBOL. IT IS USED TO ALERT YOU TO POTENTIAL PERSONAL INJURY AND PROPERTY DAMAGE. REVIEW ALL GENERAL SAFETY AND PRODUCT INFORMATION PRIOR TO INSTALLATION.



1. H2PLS/H2PLU Series tanks are not designed to withstand a vacuum. A vacuum breaker, VR 801,

should be used in order to prevent damage to the tank.

2. Turn off all electrical power to the pump and control system before working on this tank.

CAUTION

Take proper caution to prevent overheating of plastic fittings and parts during assembly.
Do not use excessive glue which could cause vent holes and openings to become plugged.

#### The following materials are required for proper installation;

AVCSP are already assembled to include, air volume control, top vent fitting with adapter, coupling.

1/2" pvc pipe cut to proper length (see table)

PVC cleaner and glue (not necessary unless you cut the AVCSP-120 down to a smaller size.

Teflon tape

#### Assembly Instructions

Note: When using pvc cleaner and glue, please follow manufacturer's reccomendations for use and proper ventilation.

1. Apply teflon tape to the top fitting and insert AVC assembly into the top of the FLU/H2PLU tank.

2. If you are cutting an AVCSP-120 down, remove the air volume control and

cut so that the pipe is the recommended length for the tank you are using.

3. Glue the 1/2" adapter to the bottom of the bent pipe

- 4. Using teflon tape, thread the air volume control onto the bottom coupling.
- 5. Insert finished assembly into the top fitting of the H2PLU/H2PLS tank.

Tank	Pipe
Model	Length
H2PLU30	22.75"
H2PLU 40	31.50"
H2PLU 40 SQ	14.75"
H2PLU 80	42.00"
H2PLU 120	45.00"

